





## Factbird PLC Sensor Cable Hardware Setup

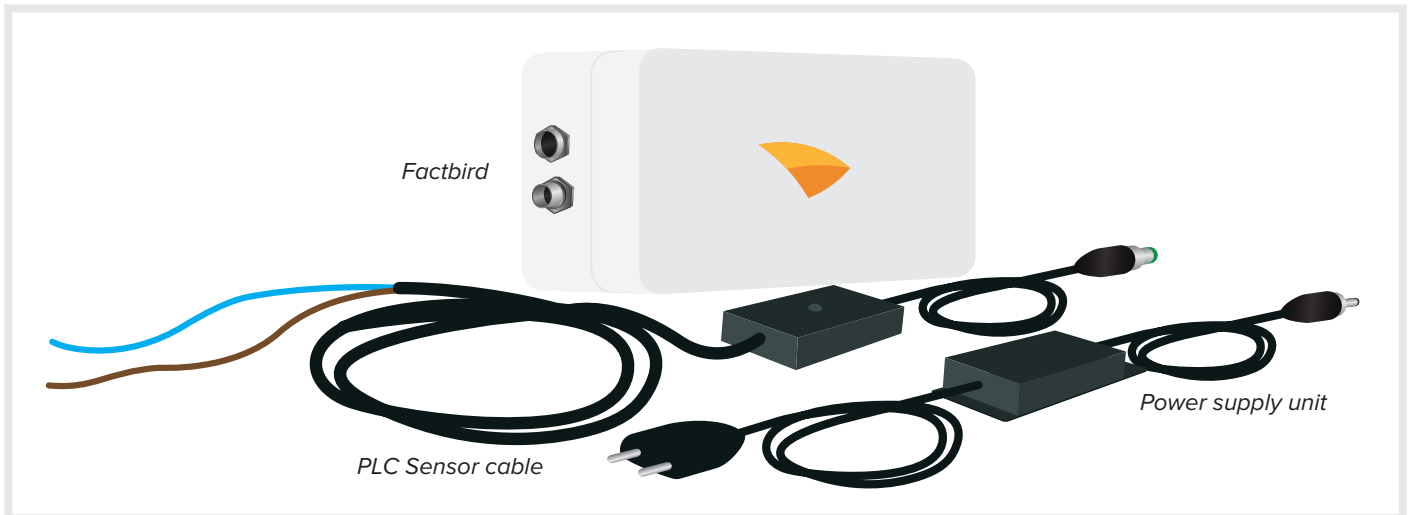

1

### Connecting wires and cables


1. Connect the wires of the PLC sensor cable at the input connector terminal of the PLC in the same position as the existing sensor.
2. Connect the PLC sensor cable to the Factbird
3. Connect the power supply unit to Factbird and plug into power

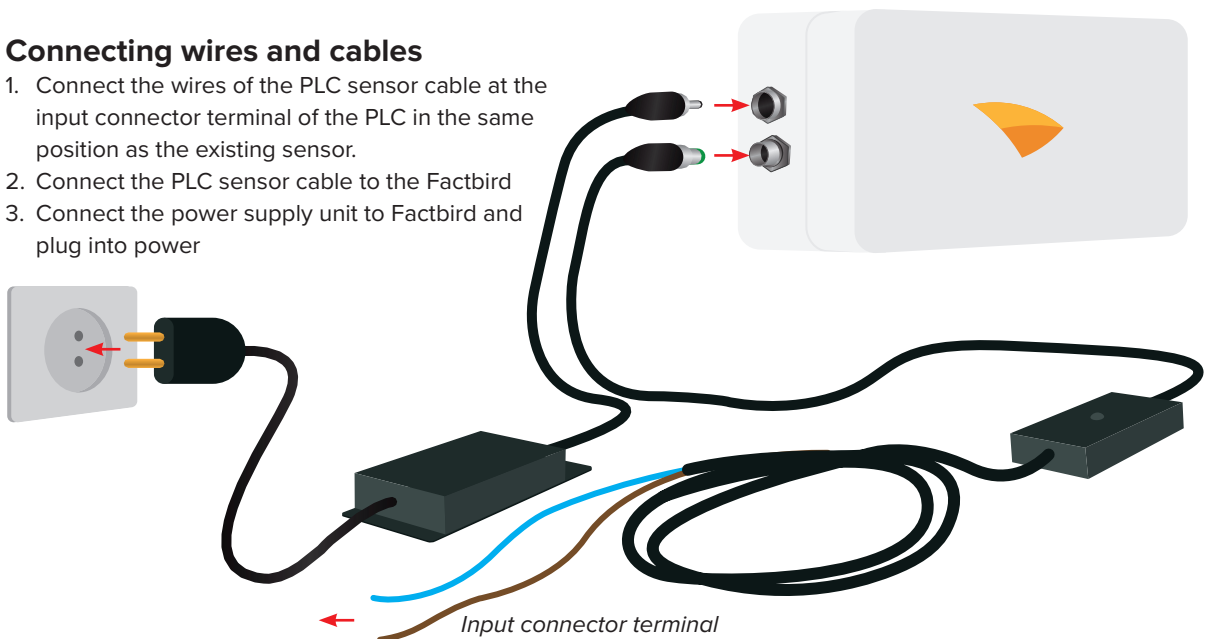

2

### Check the connection

1. The indicator light on the PLC sensor cable starts blinking once it receives signal from the existing sensor.

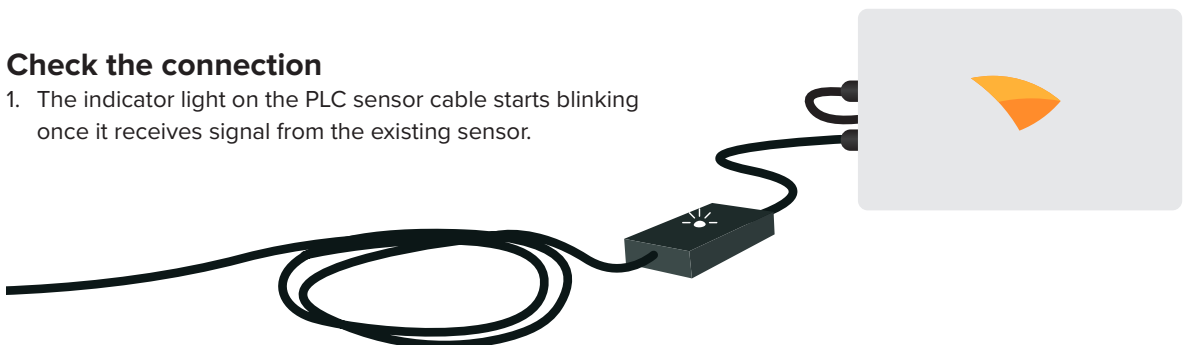




## Software setup

3


1. You receive a Welcome email from Blackbird
2. Open the email and create your password according to the instruction in the email
3. Log into the Blackbird application, view your production data at: [cloud.blackbird.online](https://cloud.blackbird.online) (System / users: [app.blackbird.online](https://app.blackbird.online))

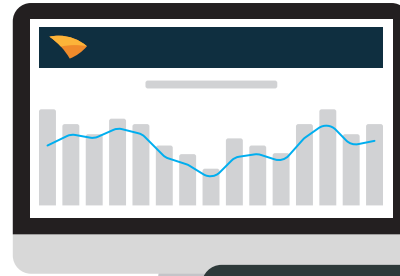



## How to make a short cut

For smartphone and tablet users, set the Blackbird icon on your home screen for quicker access

iOS

1. Log in to [cloud.blackbird.online](https://cloud.blackbird.online), (System / users: [app.blackbird.online](https://app.blackbird.online)) tap the *Share* icon  in the menu bar at the bottom
2. Tap *Add to Home Screen* in the menu, and tap *Add* again

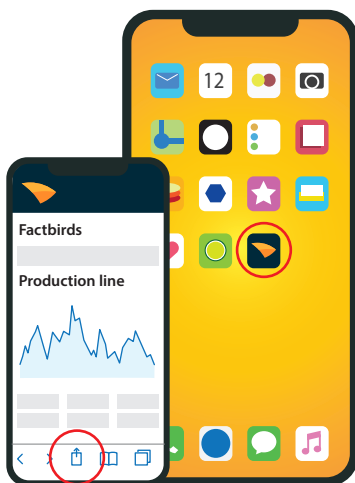

1. Log in to [cloud.blackbird.online](https://cloud.blackbird.online), (System / users: [app.blackbird.online](https://app.blackbird.online)) tap the three vertical dots  in the upper right corner
2. Tap *Add to Home Screen* in the menu, and tap *Add* again

